


HOW TO ENABLE/DISABLE KEYBOARD LOCK


0 1

Press and hold the  and  buttons simultaneously for 5 seconds.

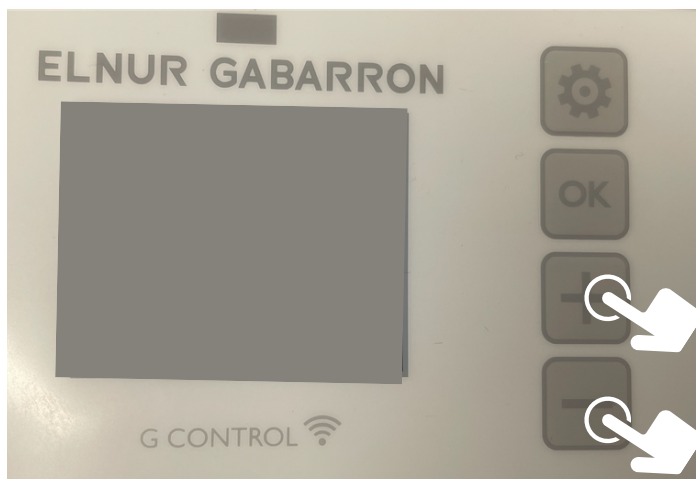



0 2

A pop-up window will confirm the keyboard lock.

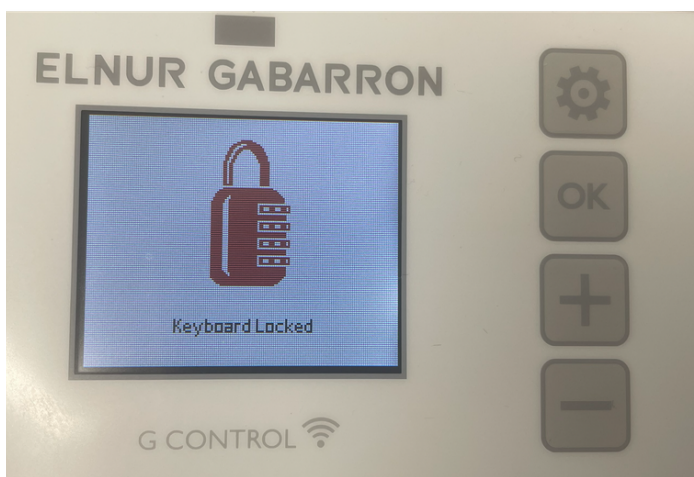

0 3

To unlock the keyboard, press the  and  button simultaneously for 5 seconds.

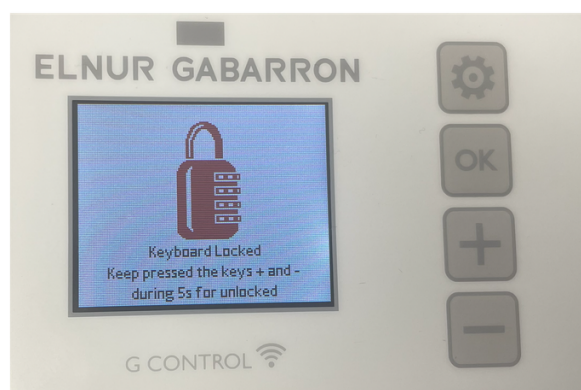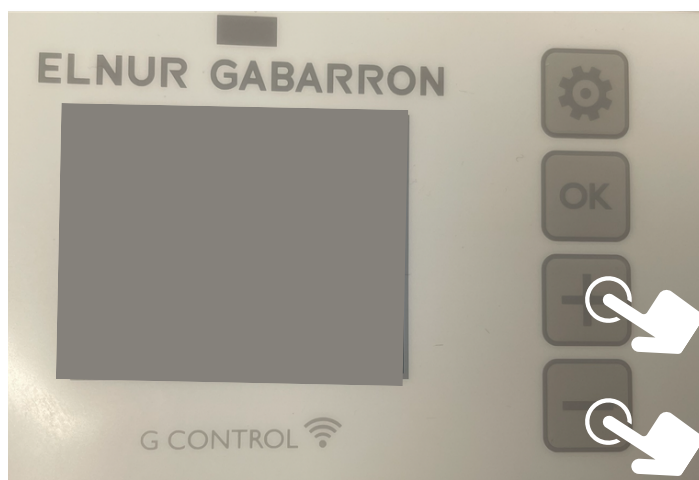

If a button is pressed before the keyboard is unlocked, the display will show the following

0 4

A pop-up window will confirm the keyboard unlock.

